

IMPORTANT: IN THE INTEREST OF PRODUCT PERFORMANCE AND SAFETY PLEASE READ THESE INSTALLATION AND WARRANTY INSTRUCTIONS BEFORE INSTALLING THE PRODUCT.



SAL products are designed in accordance with all mandatory International and AS/NZS Standards, which require installation in accordance with AS/NZS3000 by a qualified installer and regular cleaning and maintenance of the equipment. Products are sold in accordance with the following instructions and SAL standard terms and conditions of sale, available via www.sal.net.au.

Due to continued product and information updates, product data sourced from sal.net.au shall not form part of any contract and or technical performance guarantee unless expressly confirmed in writing by SAL at the time of order.

BENNY II SL2106 TC2 LED OYSTER LIGHT electrical and installation specification effective 16/10/2025.

Model No.	Input (V)/(Hz)	Power (W)	Lumens (lm)	Line Current (A)	In-rush Current (A)	CCT (K)	CRI	Mass (N.W. Kg)	Dimension D x H (mm)
SL2106/20TC2	220-240/50	10	900/1050/1000	0.1	15.6A Max.@12.9µs	3000/4000/5700	>80	0.5	Ø220 x 68
SL2106/30TC2	220-240/50	20	1900/2200/1950	0.17	23.3A Max.@11.3µs	3000/4000/5700	>80	0.7	Ø280 x 68
SL2106/40TC2	220-240/50	24	2400/2750/2500	0.22	27.6A Max.@14.6µs	3000/4000/5700	>80	1.1	Ø350 x 73
SL2106/30TC2S	220-240/50	20	1900/2200/1950	0.17	23.3A Max.@11.3µs	3000/4000/5700	>80	0.8	Ø280 x 68
SL2106/40TC2C	220-240/50	24	2400/2750/2500	0.22	27.6A Max.@14.6µs	3000/4000/5700	>80	1.2	Ø350 x 73

Integrated microwave motion sensor settings are adjustable only by a qualified installer.

Model No.	Sensor Type	Detection Sensitivity	Daylight Threshold	Hold Time	Standby Level	Standby Period
SL2106/30TC2S	Microwave	100%/50%	30lux/Disabled	5s/1min/3mins/10 mins	-	-
SL2106/40TC2C	Microwave	100%/75%/50%/10%	2lux/10lux/50lux /Disabled	5s/30s/60s/5mins/10mins /20mins/30mins	10%/20%/30%/50%	0s/10s/1min/10mins /30mins/60mins/+∞

Electrical class	Class II	Beam Angle	120°
Power factor	> 0.9	Touch current	< 0.7mA
Operating ambient min/max (°C)	-20 to 40	Storage ambient limit (°C)	-20 to 60
Operating humidity	10% to 85% RH, NC	Storage humidity	10% to 85% RH, NC
Reported TM - 21, L ₇₀ @ 85 °C (hrs)	> 54,000	Reported TM - 21, L ₇₀ @ 85 °C (hrs)	> 54,000
Aiming restrictions (if any)	N/A	Product application	Residential and Commercial interior or exterior spaces
IK rating (if relevant)	IK08	Product installation orientation	Horizontal ceiling or vertical wall mount
CCT (k) switch control (TC)	Yes	Dimmable	No
Insulation cover rating (if any)	N/A	Sensor override function	Yes
Replaceable LED	No (see clause 8)	IP rating	IP65
User replaceable LED	No (see clause 8)	Attachment type	N/A
IP rating for interior products: The designated IP rating is "from below the ceiling" unless otherwise specified.			
IP rating ALL products: Termination of the product must be made in accordance with the IP rating.			
Earth Leakage current: Is calculated in accordance with AS/NZ 60598.1.2017/Amdt 1:2017.			

General product application requirements (if applicable) :

- CCT or POWER selections (where supplied)** – IMPORTANT, where CCT colour temperature or POWER selection switching is provided, it is important to switch OFF the power before the selection is made, otherwise equipment damage may occur.
- Recycling** – SAL encourages recycling, please consider the environment when disposing of packaging, batteries & components.
- Switching or test intervals** – For optimum product performance, good design practice does not encourage 24/7 operation of lighting products without the provision of a routine switching or regulatory test cycle. As a guide for continual operation installations, a twelve (12) hour duration for Industrial and Commercial applications and a six (6) hour duration for Residential applications should be considered.
- Product maintenance** – In line with the relevant design standards and to protect your investment, it is important to have in place a routine cleaning program that reflects the installation environment and maintains the product in a clean and functional condition.

IMPORTANT - The supply must be isolated before any product maintenance or cleaning is conducted. In addition, damage to ANY cable or cord supplied with the product must be addressed as follows; For attachment type X having a specially prepared cable, if the external flexible cable is damaged, it must be replaced by an equivalent cable exclusively available from the manufacturer or authorised installer. For attachment type Y, if the external flexible cable is damaged, it must be exclusively replaced by an equivalent cable by the manufacturer or authorised installer. For attachment type Z, if the external flexible cable is damaged, the cable cannot be replaced and the luminaire must be destroyed.

5. Adverse, corrosive and coastal installation environments – Unless the product is specifically designated for such applications in these installation instructions, which is supported by a professional maintenance program; installation of equipment in such environments is not recommended.

6. Dimming products – Dimming circuits and product compatibility must be validated by the installer before installation; SAL cannot be responsible for third party changes in dimmer compatibility.



7. **Suspended products** – For installation safety, any suspended products must NOT be installed in high air movement spaces or locations subject to impact.

8. **Light source replacements** – (Non-replaceable light sources) - The light source of the product is deemed not replaceable, when the product reaches its end of life, the complete product must be replaced by a qualified installer. (Non-user replaceable light sources) - The light source of the product must only be replaced by the manufacturer or qualified installer. **Caution, risk of electric shock.**

9. **Interior downlights and sensors with remote drivers and electrical accessories** – The mounting facilities provided for the device (if any), need only be utilized if in the application of the product is required by AS/NZS3000. Drivers are not designed for installation environments that restrict conventional airflow.

10. **Ripple injection, induced flicker (QLD & NSW regions)** – Installations subject to off-peak ripple induced flicker, (which are beyond the manufactures control), should strongly consider the use of circuit filtering products, or for interior downlight installations, the use of products designed to block the signal interferences, such as the SAL rippleSHIELD series.

11. **Floodlight products** – Unless nominated aiming restrictions or installation parameters apply, products are designed for installation environments between ground and 15 metres in height, subject to the desired optical performance being achieved. For floodlight installation environments that have restricted access (eg: columns and roof-lines) which are subject to unstable electrical supply or electrical surges (which void warranty), consideration of the installation of an independent surge protector is strongly recommended.

12. **Emergency enabled products** – In the interest of transport and safety, emergency products are supplied with the battery disconnected. In addition to specific emergency commissioning instructions, this battery MUST be connected at the time of installation. Continual use in emergency mode greater than 240 hours without recharge, will result in battery failure and void battery warranty.

13. **Specific installation procedures** (if any) - this device must be installed by a licensed electrician:

1

Switch off

FC

Drill holes in the ceiling according to the fixing center distance (FC) for the model:

Model No.	FC(mm)
SL2106/20TC2	205
SL2106/30TC2	264
SL2106/40TC2	333

2

OPEN → CLOSE

Open the cover by rotating it in the direction indicated on the label.

3

Open the terminal box and connect the wires.

4

Set the desired color temperature (CCT) using the DIP switch:

3000K / 4000K / 5700K

5

Align it with the lamp body and snap it into place.

Rotate it in the direction of the markings until it locks securely.

6

Test and energise

Sensor Adjustment (for qualified installers only)

Use a screwdriver to gently release all tabs (avoid using excessive force to prevent damage).


Adjust the sensor settings according to the instruction guidelines.

OPEN → CLOSE

Align it with the lamp body and snap it into place.


Rotate it in the direction of the markings until it locks securely.

Detection coverage diagram:

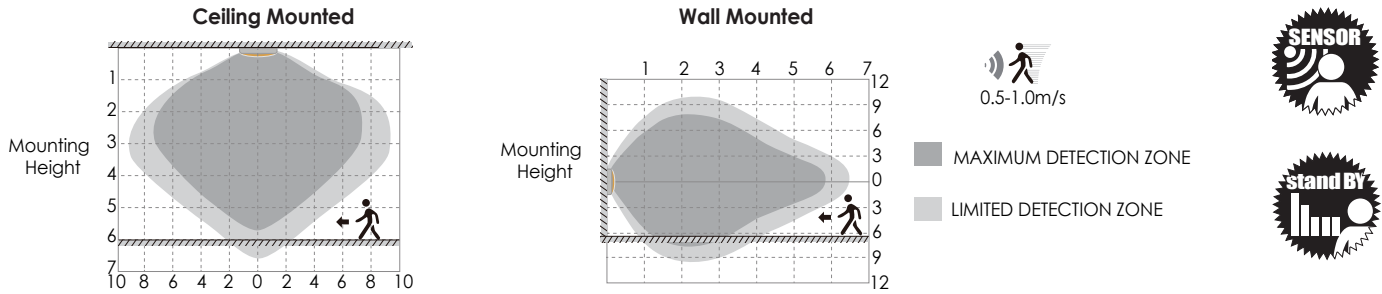

Specifications settings - (SL2106/40TC2C model)

Default Setting:
 Detection area: 100%
 Hold time: 10min
 Daylight threshold: Disable
 Stand-by period: 30mins
 Stand-by dimming level: 20%

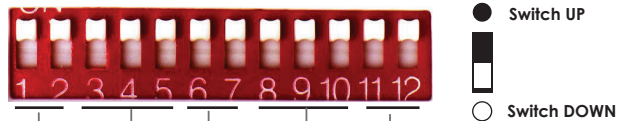

●	●	100%
●	○	75%
○	○	50%
○	○	10%

Detection area

The zone in which movement is detected and can trigger the sensor. A 100% detection area is also referred to as high sensitivity.

●	●	5s
○	●	30s
○	○	60s
○	○	5min
○	○	10min
○	○	20min
○	○	30min

Hold-time

The duration the light remains at 100% brightness after motion has ceased within the detection area.

●	●	Disable
○	●	50lux
○	●	10lux
○	○	2lux

Daylight threshold

Defines the ambient brightness level. The sensor operates only when the ambient brightness falls below the preset lux value. If set to "Disable", the sensor activates whenever motion is detected, regardless of ambient brightness.

●	●	0s
○	●	10s
○	○	1min
○	○	10min
○	○	30min
○	○	60min
○	○	∞

Stand-by period

The time the light stays at a reduced output before switching off completely. When set to "∞", the light remains at low output indefinitely in the absence of movement within the detection area.

●	●	10%
○	●	20%
○	○	30%
○	○	50%



Stand-by dimming level

The brightness level maintained during the stand-by period.

DUSK/DAWN Function for SL2106/40TC2C

1. Set "Daylight threshold" value on "50lux"
2. Set "Stand-by period" on "∞"
3. Set "Stand-by dimming level" on 10%,20% or 30%;

The SL2106/40TC2C can distinguish between artificial and natural light. It automatically turns on the light when the ambient brightness falls below the preset lux level and turns it off when the brightness exceeds the preset level.

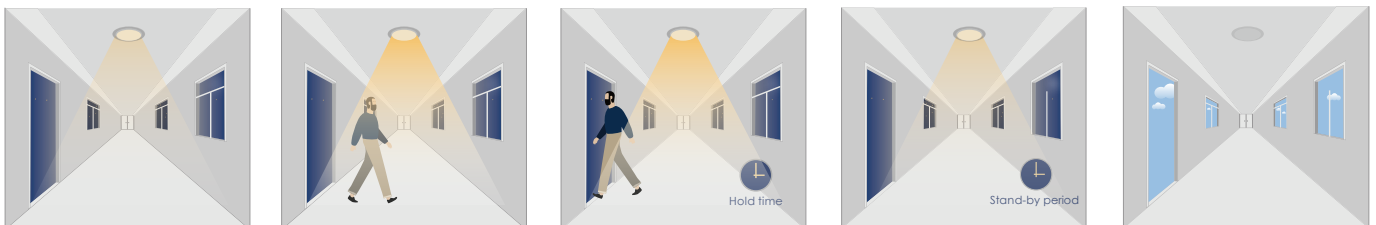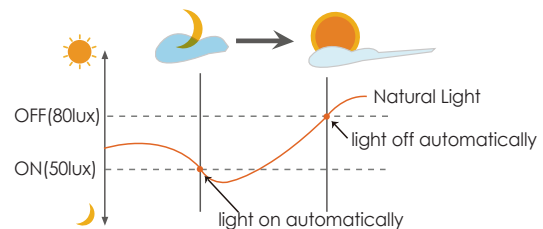

1. When ambient brightness is insufficient, the sensor turns on the light and maintains it at the standby dimming level, even if no movement or presence is detected.
2. When movement or presence is detected, the light increases to 100% brightness.
3. Once movement is no longer detected, the light remains at 100% brightness for the hold time.
4. After the hold time, the light dims to the standby dimming level and remains at that level continuously.
5. When ambient brightness is sufficient, the sensor automatically turns off the light.

Specifications settings - (SL2106/30TC2S model)

Default Setting:

Detection area: 100%


Hold time: 10min

Daylight threshold: Disable


Manual Override Function:

To enable 'Manual Override' or 'Permanent On', simply switch off and on three times with an interval of 1 second. The lights will now stay on permanently.


To return to 'Automatic Mode', switch the unit off and after 1 minute switch on again. The unit will resume normal operation.

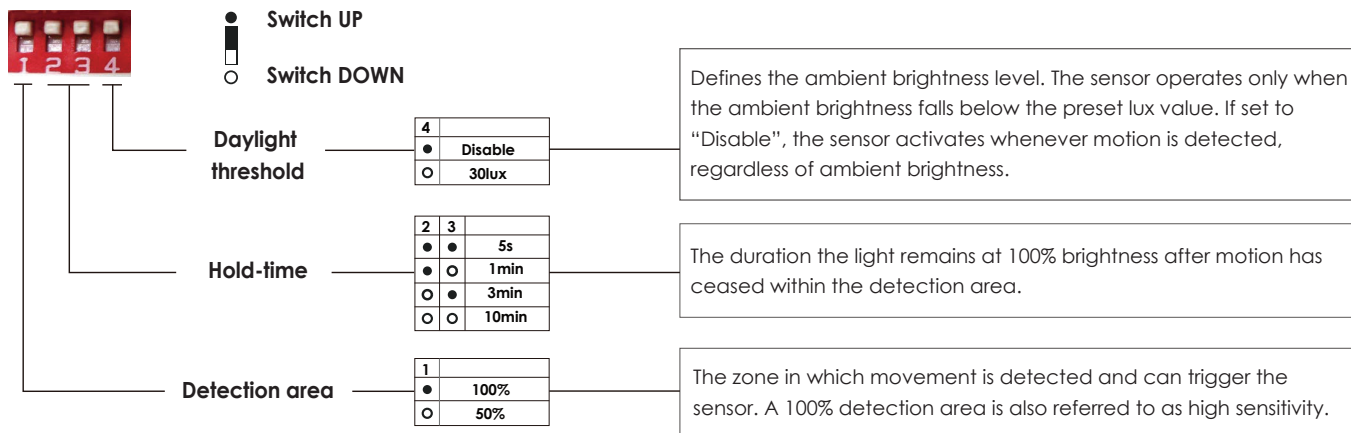


Daylight Control Function

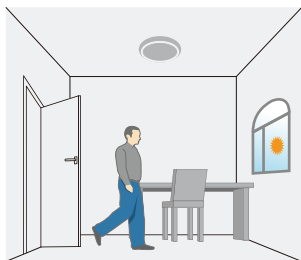

When sufficient daylight is available, the light remains OFF even if motion is detected.

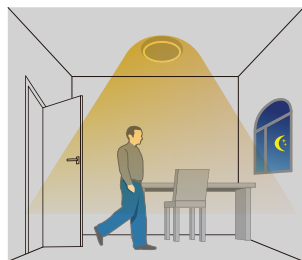

When daylight is insufficient, the light turns ON upon motion detection.

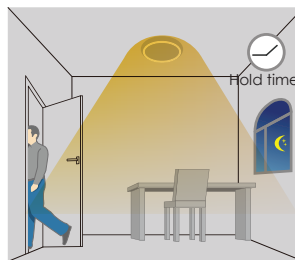

After the last detection, the light stays on for the set hold time.



The light switches OFF after the hold time.

14. Warranty – In accordance with SAL's standard terms and conditions of sale, SAL warrant this product to be free from defects in materials and or workmanship for a period as stated below for goods not subject to incorrect installation, maintenance, operation, mishandling, environmental, unauthorised modifications or electrical operating conditions outside the nominated product specification as detailed in these installation instructions. The benefits to you given by this warranty are in addition to other rights and remedies you have under law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty term – Residential usage (36) months, Commercial usage (24) months, Replaceable Lamps (where supplied) (12) months and Lithium batteries where supplied (24) months from date of purchase. For New Zealand, please refer to www.sal.co.nz for warranty conditions and service.

How to make a claim?

Step # 1 – Within 30 days of the fault discovery, please contact the original place of the SAL product purchase during standard (local) business hours, with the following information **(a)** proof of purchase **(b)** description and quantity of the claimed fault **(c)** address of installation. **(d)** operating hours of the product.

Step # 2 – It is then the responsibility of the original place of product purchase to report the matter to SAL aftersales;

NSW ACT	- SAL National Pty Ltd, 40 Biloela Street Villawood NSW 2163	P # 02 9723 3099
QLD	- SAL National Pty Ltd, 36 Whitelaw Place Richlands QLD 4077	P # 07 3879 5999
VICT TAS	- SAL National Pty Ltd, 46-48 Keys Road Moorabbin Victoria 3189	P # 03 9532 3168
SA NT	- SAL National Pty Ltd, 79 Fredrick St Welland SA 5007	P # 08 7084 1958
WA	- SAL National Pty Ltd, 29 Beringarra Av Malaga WA 6090	P # 08 9248 7458
NZ	- Hamer, 130 Bush Road, Albany, Auckland, 0632	P # 0800 239 239

Step # 3 – Upon review of your claim and if the product is required to be returned to SAL for technical evaluation, then at the owners expense the product must be returned to SAL as per the above nominated locations.

Step # 4 – Pending the evaluation, the claim will be validated resulting in the product being repaired or replaced with the same or best equivalent product at the discretion of SAL, or rejected if the product fault was found to be caused by conditions beyond the responsibility of SAL warranty obligations. Consideration of installation, product removal, return freight and or testing fees are not the responsibility of SAL.

