

**IMPORTANT:** IN THE INTEREST OF PRODUCT PERFORMANCE AND SAFETY PLEASE READ THESE INSTALLATION AND WARRANTY INSTRUCTIONS BEFORE INSTALLING THE PRODUCT.



SAL products are designed in accordance with all mandatory International and Australian Standards, which require installation by a qualified installer and regular cleaning and maintenance of the equipment. Products are sold in accordance with the following instructions and SAL standard terms and conditions of sale, which are available via [www.sal.net.au](http://www.sal.net.au).

**TRI-GEM MULTI S9842MCS LED DOWNLIGHT** electrical and installation specification effective 18/04/2019.

Model No.	Input (V)/(Hz)	Power (W)	Lumens (lm)	Line Current (mA)	In-rush Current	CCT (K)	CRI	Fitting Colour	Mass (N.W. kg)	Cutout Size (mm)	Dimension (mm)
<b>S9842MCS/WH</b>	240/50	10	800/900/850	40	10A Max.@<400µs	3000/4000/5700	> 80	White	0.2	Ø90	Ø103 x H67


Electrical class	Class II	Beam Angle	90°
Power factor	> 0.9	Earth Leakage current	< 1mA
Operating ambient min/max (°C)	0 to 40	Storage ambient limit (°C)	0 to 60
Operating humidity	+10% to 85% RH, NC	Storage humidity	+10% to 85% RH, NC
Calculated TM - 21, L <sub>70</sub> @ 85 °C (hrs)	60,000	Reported TM-21, 85 °C, L <sub>70</sub> (hrs)	> 54,000
Aiming restrictions (if any)	No	Product application	Interior residential, commercial spaces
IK rating (if relevant)	N/A	Product installation orientation	Horizontal ceiling mount, recessed
CCT (K) control (TC)	Yes	Dimmable	Yes
Insulation cover rating (if any)	IC-4	PIXIE connectivity	Yes, switch & dimming
Replaceable LED	No (see clause 8)	IP rating	IP44 from below ceiling, IP20 from above ceiling
User replaceable LED	No (see clause 8)	Attachment type	X
IP rating for interior products: The designated IP rating is "from below the ceiling" unless otherwise specified.			
IP rating ALL products; Termination of the product must be made in accordance with the IP rating.			
Earth Leakage current: Is calculated in accordance with AS/NZ 60598.1.2013 table 10.3.			

**General product application requirements (where applicable) :**

- CCT selection (where supplied)** – IMPORTANT, where CCT colour temperature selection switching is provided, it is important to switch OFF the power before the CCT selection is made, otherwise equipment damage may occur.
- Recycling** – SAL encourages recycling, please consider the environment when disposing off packaging and components.
- Switching or test intervals** – For optimum product performance, good design practice does not encourage 24/7 operation of lighting products without the provision of a routine switching or regulatory test cycle. As a guide for continual operation installations, a twelve (12) hour duration for Industrial and Commercial applications and six (6) hour duration for Residential applications should be considered.
- Product maintenance** – In line with the relevant design standards and to protect your investment, it is important to have in place a routine cleaning program that reflects the installation environment and maintains the product in a clean and functional condition.  
IMPORTANT - The supply must be isolated before any product maintenance or cleaning is conducted. In addition, damage to ANY cable or cord supplied with the product must be addressed as follows; For attachment type X having a specially prepared cable, if the external flexible cable is damaged, it must be replaced by an equivalent cable exclusively available from the manufacturer or authorised installer. For attachment type Y, if the external flexible cable is damaged, it must be exclusively replaced by an equivalent cable by the manufacturer or authorised installer. For attachment type Z, if the external flexible cable is damaged, the cable cannot be replaced and the luminaire must be destroyed.
- Adverse, corrosive and coastal installation applications** – Unless the product is specifically designated for such applications in these installation instructions, which is supported by a professional maintenance program; installation of equipment in such environments is not recommended.
- Dimming products** – Dimming circuits and product compatibility must be validated by the installer before installation; SAL cannot be responsible for third party changes in dimmer compatibility.
- Suspended products** – For installation safety, any suspended products must NOT be installed in high air movement spaces or locations subject to impact.
- Light source replacements** – (non-replaceable light sources) - The light source of the product is deemed not replaceable, when the product reaches its end of life, the complete product must be replaced by a qualified installer. (Non-user replaceable light sources) - The light source of the product must only be replaced by the manufacturer or qualified installer. **Caution, risk of electric shock.**
- Interior downlights and sensors with remote drivers** – The mounting facilities provided for the transformer/driver (if any), need only be utilized if in the application of the product is required by AS3000. Drivers are not designed for installation environments that restrict conventional airflow.
- Floodlight products** – Unless nominated aiming restrictions or installation parameters apply, products are designed for installation environments between ground and 15 metres in height, subject to the desired optical performance being achieved.

11. **Specific installation procedures** – This product is designed with a multifunction colour temperature changing feature:

- (A) simply select the colour temperature using the DIP switch located on the rear of the product or select **AUTO** to allow the following DIY functionality.
- (B) **when using a SAL PIXIE dimmer and associated SAL PIXIE APP** – after discovery, simply select the device and select the desired colour temperature, or follow paragraph (D) instructions.
- (C) **when using the product with a standard switch mech** – after installation of the downlights and energizing the circuit, turn the lights **ON**, then toggle the switch **OFF** and then **ON THREE TIMES** in quick succession to change the colour temperature. Repeat the process until the desired colour temperature is achieved. Three colour temperature selections are available.
- (D) **when using the product with a standard rotary analogue dimmer and a standard switch mech** – after installation of the downlights and energizing the circuit, turn the lights **ON**, then toggle the switch **OFF** and then **ON THREE TIMES** in quick succession to change the colour temperature. Repeat the process until the desired colour temperature is achieved. Three colour temperature selections are available. Please ensure the dimmer and downlights are compatible.
- (E) **when using the product with a digital dimmer incorporating a push button switch function** – after installation of the downlights and energizing the circuit, turn the lights **ON**, then push the button **THREE TIMES** in quick succession to change the colour temperature. Repeat the process until the desired colour temperature is achieved. Three colour temperature selections are available. Please ensure the dimmer and downlights are compatible.
- (F) **reset by switch mech** – to reset the colour temperature to 3000K, turn the lights **ON**, then toggle the switch **OFF** and then **ON TWO TIMES** in quick succession.
- (G) **reset by digital push button** – to reset the colour temperature to 3000K, turn the lights **ON**, then push the button **TWO TIMES** in quick succession.
- (H) **recommended SAL digital push button dimmers** – SDD350BT, SDD400U, SDD350UM, SDD350TCM and relevant SAL SECONDARY DEVICES.
- (I) **non - compatible SAL digital push button dimmer** – SDD300UM

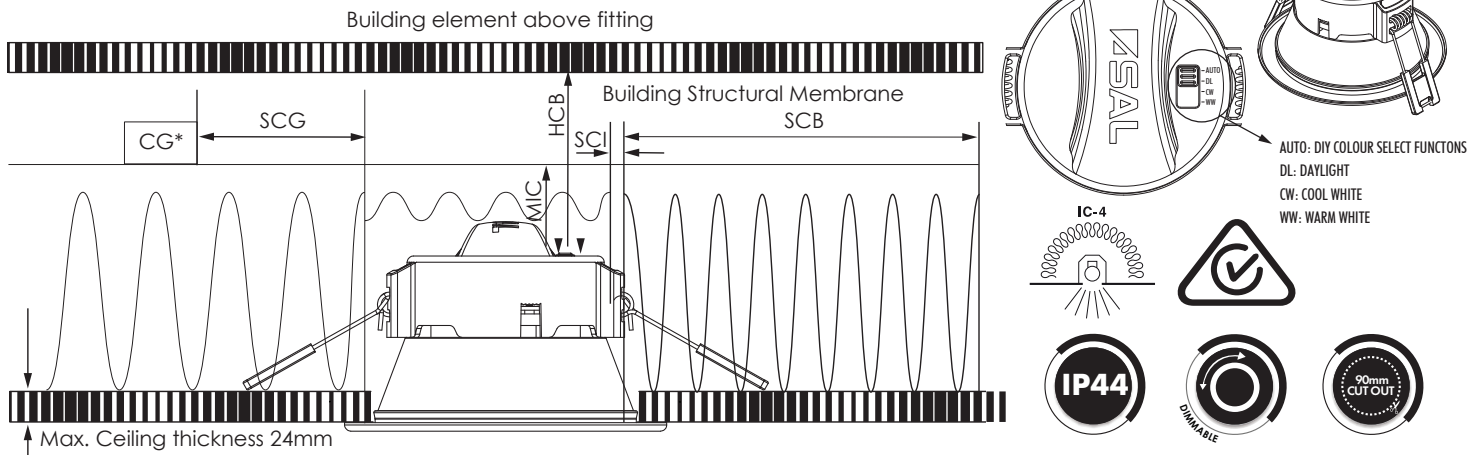

Definition - WARNING: RISK OF OVERHEATING OR FIRE IF THE CLEARANCE DISTANCES ARE COMPROMISED.		Clearance
HCB	– The minimum clearance distance from the top of the luminaire to any normally flammable building element	0 mm
MIC	– The minimum clearance distance from the top of the luminaire to any building insulation	0 mm
SCB	– The minimum clearance distance from the side of the luminaire to any normally flammable building element	0 mm
SCI	– The minimum clearance distance from the side of the side of the luminaire to any building insulation	0 mm
SCG	– Side clearance to auxiliary equipment control gear (CG) (if supplied)	N/A

CG\* – Remote control gear provided (if any) must not be covered

12. **Warranty** – In accordance with SAL's standard terms and conditions of sale, SAL warrant this product to be free from defects in materials and or workmanship for a period as stated below for goods not subject to incorrect installation, maintenance, operation, mishandling, environmental, unauthorised modifications or electrical operating conditions outside the nominated product specification as detailed in these installation instructions. The benefits to you given by this warranty are in addition to other rights and remedies you have under law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**Warranty term** – Thirty six (36) months for commercial use and sixty (60) months for residential use from date of purchase.

**How to make a claim?**

**Step # 1** – Within 30 days of the fault discovery, please contact the original place of the SAL product purchase during standard (local) business hours, with the following information (a) proof of purchase (b) description and quantity of the claimed fault (c) address of installation (d) operating hours of the product.

**Step # 2** – It is then the responsibility of the original place of product purchase to report the matter to SAL aftersales;

NSW | ACT | QLD – SAL Nationwide Pty Ltd. 40 Biloela Street Villawood NSW 2163 | P: 02 9723 3099  
 VICT | TAS | SA | NT | WA – SAL Nationwide Pty Ltd. 46-48 Keys Road Moorabbin Victoria 3189 | P: 03 9532 3168

**Step # 3** – Upon review of your claim and if the product is required to be returned to SAL for technical evaluation, then at the owners expense the product must be returned to SAL as per the above nominated locations.

**Step # 4** – Pending the evaluation, the claim will be validated resulting in the product being repaired or replaced with the same or best equivalent product at the discretion of SAL, or rejected if the product fault was found to be caused by conditions beyond the responsibility of SAL warranty obligations. Consideration of installation, product removal, return freight and or testing fees are not the responsibility of SAL.