 


IMPORTANT: IN THE INTEREST OF PRODUCT PERFORMANCE AND SAFETY PLEASE READ THESE INSTALLATION AND WARRANTY INSTRUCTIONS BEFORE INSTALLING THE PRODUCT.



SAL products are designed in accordance with all mandatory International and AS/NZS Standards, which require installation in accordance with AS/NZS3000 by a qualified installer and regular cleaning and maintenance of the equipment. Products are sold in accordance with the following instructions and SAL standard terms and conditions of sale, available via www.sal.net.au.

Due to continued product and information updates, product data sourced from sal.net.au shall not form part of any contract and or technical performance guarantee unless expressly confirmed in writing by SAL at the time of order.

UFO SHB23SE LED HIGHBAY electrical and installation specification effective 18/2/2022.

| Model No. | Input (V)/(Hz) | Power (W) | Lumens (lm) | Line Current (A) | CCT (K) | CRI | Body Colour | Mass (N.W. kg) | Dimension D x H (mm) | Max. LED Driver Number on MCB C type 16A |
|---------------|----------------|-----------|-------------|------------------|---------|------|-------------|----------------|----------------------|--|
| SHB23SE100NDL | 220-240/50 | 80 | 14400 | 0.34 | 5000 | > 70 | Black | 2.2 | Ø260 x 198 | 8 |
| SHB23SE150NDL | 220-240/50 | 120 | 21600 | 0.50 | 5000 | > 70 | Black | 2.5 | Ø280 x 198 | 7 |
| SHB23SE200NDL | 220-240/50 | 180 | 32400 | 0.75 | 5000 | > 70 | Black | 2.9 | Ø300 x 198 | 4 |

| | | | |
|---|--------------------------|--|---|
| Electrical class | Class I / ISOLATED 1-10V | Beam Angle | 90° |
| Power factor | ≥ 0.95 | Earth Leakage current | < 1mA |
| Operating ambient min/max (°C) | -20 to 40 | Storage ambient limit (°C) | 0 to 60 |
| Operating humidity | 10% to 85% RH, NC | Storage humidity | 10% to 85% RH, NC |
| Calculated TM - 21, L ₇₀ @ 85 °C (hrs) | > 90,000 | Reported TM-21, 85 °C, L ₇₀ (hrs) | > 72,000 |
| Aiming restrictions (if any) | No | Product application | Interior, exterior commercial and industrial spaces |
| IK rating (if relevant) | 08 | Product installation orientation | Suspension or optional fixed |
| CCT (K) switch control (TC) | No | Dimmable | 1-10V ISOLATED TERMINATION |
| Insulation cover rating (if any) | N/A | PIXIE connectivity | Yes, switch only |
| Replaceable LED | No (see clause 8) | IP rating | IP65 |
| User replaceable LED | No (see clause 8) | Attachment type | Z |
| IP rating for interior products: The designated IP rating is "from below the ceiling" unless otherwise specified. | | | |
| IP rating ALL products; Termination of the product must be made in accordance with the IP rating. | | | |
| Earth Leakage current: Is calculated in accordance with AS/NZ 60598.1.2017/Amdt 1:2017. | | | |

General product application requirements (if applicable) :

1. **CCT or POWER selections (where supplied)** – IMPORTANT, where CCT colour temperature or POWER selection switching is provided, it is important to switch OFF the power before the selection is made, otherwise equipment damage may occur.

2. **Recycling** – SAL encourages recycling, please consider the environment when disposing of packaging, batteries & components.

3. **Switching or test intervals** – For optimum product performance, good design practice does not encourage 24/7 operation of lighting products without the provision of a routine switching or regulatory test cycle. As a guide for continual operation installations, a twelve (12) hour duration for Industrial and Commercial applications and a six (6) hour duration for Residential applications should be considered.

4. **Product maintenance** – In line with the relevant design standards and to protect your investment, it is important to have in place a routine cleaning program that reflects the installation environment and maintains the product in a clean and functional condition.

IMPORTANT - The supply must be isolated before any product maintenance or cleaning is conducted. In addition, damage to ANY cable or cord supplied with the product must be addressed as follows; For attachment type X having a specially prepared cable, if the external flexible cable is damaged, it must be replaced by an equivalent cable exclusively available from the manufacturer or authorised installer. For attachment type Y, if the external flexible cable is damaged, it must be exclusively replaced by an equivalent cable by the manufacturer or authorised installer. For attachment type Z, if the external flexible cable is damaged, the cable cannot be replaced and the luminaire must be destroyed.

5. **Adverse, corrosive and coastal installation environments** – Unless the product is specifically designated for such applications in these installation instructions, which is supported by a professional maintenance program; installation of equipment in such environments is not recommended.

6. **Dimming products** – Dimming circuits and product compatibility must be validated by the installer before installation; SAL cannot be responsible for third party changes in dimmer compatibility.

7. **Suspended products** – For installation safety, any suspended products must NOT be installed in high air movement spaces or locations subject to impact.

8. **Light source replacements** – (Non-replaceable light sources) - The light source of the product is deemed not replaceable, when the product reaches its end of life the complete product, it must be replaced by a qualified installer. (Non-user replaceable light sources) - The light source of the product must only be replaced by the manufacturer or qualified installer. **Caution, risk of electric shock.**




9. Interior downlights and sensors with remote drivers and electrical accessories – The mounting facilities provided for the transformer/driver (if any), need only be utilized if in the application of the product is required by AS3000. Drivers are not designed for installation environments that restrict conventional airflow.

10. Floodlight products – Unless nominated aiming restrictions or installation parameters apply, products are designed for installation environments between ground and 15 metres in height, subject to the desired optical performance being achieved. For floodlight installation environments that have restricted access (eg: columns and roof-lines) which are subject to unstable electrical supply or electrical surges (which void warranty), consideration of the installation of an independent surge protector is strongly recommended.


11. Emergency enabled products – In the interest of transport and safety, emergency products are supplied with the battery disconnected. In addition to specific emergency commissioning instructions, this battery **MUST** be connected at the time of installation. Continual use in emergency mode greater than 240 hours without recharge, will result in battery failure and void battery warranty.

12. Specific installation procedures (if any) - this device must be installed by a licensed electrician:

Mounting hook

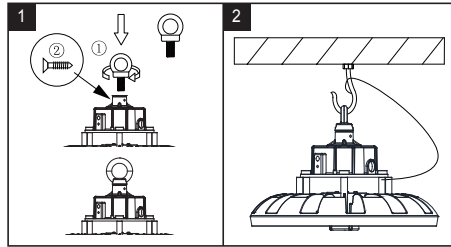


Wiring Diagram with 1-10V control

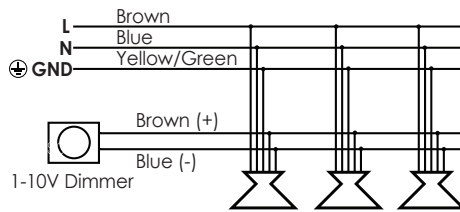

CAUTION 1-10V ISOLATED TERMINATION:

This product is supplied with 1-10V ISOLATED dimming function. The 1-10V conductor insulation caps should not be removed for any reason beyond termination of the conductors to an appropriate dimming system. When an appropriate dimming system is selected, to maintain protection against electrical shock, ensure the 1-10V dimming conductors are terminated in a manner that maintains the designated IP rating and electrical classification. All electrical termination must be conducted whilst the electrical circuit is OFF.

use with SHB23SE/CS only:

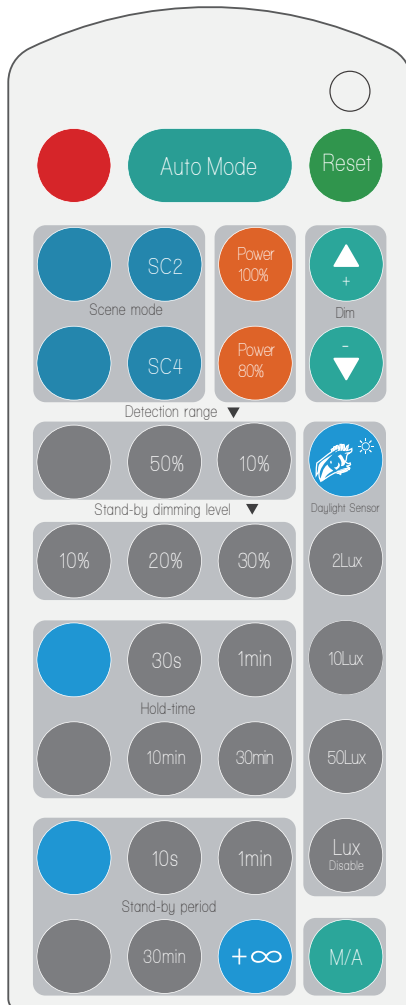

SHB23SE/RC
(sold separately)



Permanent ON/OFF function

Press the "ON/OFF" button, the light switches to permanent ON or permanent OFF mode. * Press "Auto Mode", "RESET" or "Scene mode" buttons to quit from this mode.



Sensor mode

Press "Auto Mode" button, the sensor operates, all settings remain the same as the last status before the light was switched ON/OFF.



Reset function

Press "RESET" button, all settings return to the value of SCI settings.



Dim +/-

Long press "Dim +" or "Dim -" to adjust the light brightness during hold-time. "+" means dimming up, "-" means dimming down, min 30%



Test mode

The button "Test 2s" is for testing purpose only. The sensor switches to test mode (hold-time is 2s) automatically after commissioning, the stand-by period and daylight sensor are disabled.

* This mode can be ended by pressing "reset", or any button of "scene mode" and "hold time". The sensor setting is changed accordingly.



Power output

Press these buttons to select full output level. 80% button allows for energy saving.



Lux disable

Press this button to disable the daylight sensor for threshold control. When motion is detected, the fixture will always turn ON, regardless of the ambient light level.



Manual override / absence detection

This function is disabled.

Scene mode

There are four scene modes functions built-into the remote control. Select as appropriate. Each scene can be modified using the remote. The sensor will remember updates even after a power outage. The green "RESET" button on the remote reverts to original SCI.

| Scene options | Detection range | Hold-time | Stand-by period | Stand-by dimming level | Daylight sensor |
|---------------|-----------------|-----------|-----------------|------------------------|-----------------|
| SC1 | 100% | 10min | 10min | 10% | 2Lux |
| SC2 | 100% | 5min | 10min | 10% | 2Lux |
| SC3 | 100% | 10min | 30min | 10% | 10Lux |
| SC4 | 100% | 10min | +∞ | 10% | 50Lux |

Adjust the settings by pressing the detection range buttons / hold-time / stand-by period / stand-by dimming level / daylight sensor. The latest setting remain valid.

Detection range

Select as appropriate to adjust/reduce sensor sensitivity. Please refer to detection pattern.

Hold-time

Hold-time refers to the time period that the light remains 100% ON if no moment is detected.

Daylight sensor

Select the daylight sensor threshold level at MIN 2 LUX or MIN 20LUX. The ambient light must below this MIN LUX threshold for the sensor to operate. Press the BLUE button to view ambient light. Press the Lux Disable button for the fixture to remain ON when motion is detected.

Stand-by period (tri-level control)

Press the buttons of "stand-by period" to set the stand-by period at 0s / 10s / 1min / 10min / 30min / +∞.

Note: "0s" means ON/OFF control; "+∞" means bi-level control, the light remains standby dimming level until motion is detected.

Stand-by dimming level

Press the buttons of "stand-by dimming level" to set the stand-by dimming level at 10% / 20% / 30%.



13. Warranty – In accordance with SAL's standard terms and conditions of sale, SAL warrant this product to be free from defects in materials and or workmanship for a period as stated below for goods not subject to incorrect installation, maintenance, operation, mishandling, environmental, unauthorised modifications or electrical operating conditions outside the nominated product specification as detailed in these installation instructions. The benefits to you given by this warranty are in addition to other rights and remedies you have under law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty term – Residential usage (60) months, Commercial usage (36) months, Replaceable Lamps (where supplied) (12) months and Lithium batteries where supplied (24) months from date of purchase. For New Zealand, please refer to www.sal.co.nz for warranty conditions and service.

How to make a claim?

Step # 1 – Within 30 days of the fault discovery, please contact the original place of the SAL product purchase during standard (local) business hours, with the following information **(a)** proof of purchase **(b)** description and quantity of the claimed fault **(c)** address of installation. **(d)** operating hours of the product.

Step # 2 – It is then the responsibility of the original place of product purchase to report the matter to SAL aftersales;

| | | |
|------------|---|------------------|
| NSW ACT | - SAL National Pty Ltd, 40 Biloela Street Villawood NSW 2163 | P # 02 9723 3099 |
| QLD | - SAL National Pty Ltd, 36 Whitelaw Place Richlands QLD 4077 | P # 07 3879 5999 |
| VICT TAS | - SAL National Pty Ltd, 46-48 Keys Road Moorabbin Victoria 3189 | P # 03 9532 3168 |
| SA NT | - SAL National Pty Ltd, Unit 1, 9 Alfred Avenue, Beverley SA 5009 | P # 08 7084 1958 |
| WA | - SAL National Pty Ltd, 29 Beringarra Av Malaga WA 6090 | P # 08 9248 7458 |
| NZ | - Hamer, 130 Bush Road, Albany, Auckland, 0632 | P # 0800 239 239 |

Step # 3 - Upon review of your claim and if the product is required to be returned to SAL for technical evaluation, then at the owners expense the product must be returned to SAL as per the above nominated locations.

Step # 4 - Pending the evaluation, the claim will be validated resulting in the product being repaired or replaced with the same or best equivalent product at the discretion of SAL, or rejected if the product fault was found to be caused by conditions beyond the responsibility of SAL warranty obligations. Consideration of installation, product removal, return freight and or testing fees are not the responsibility of SAL.

